


Noise Dose Meter

ST-130/ST-130S User's Manual

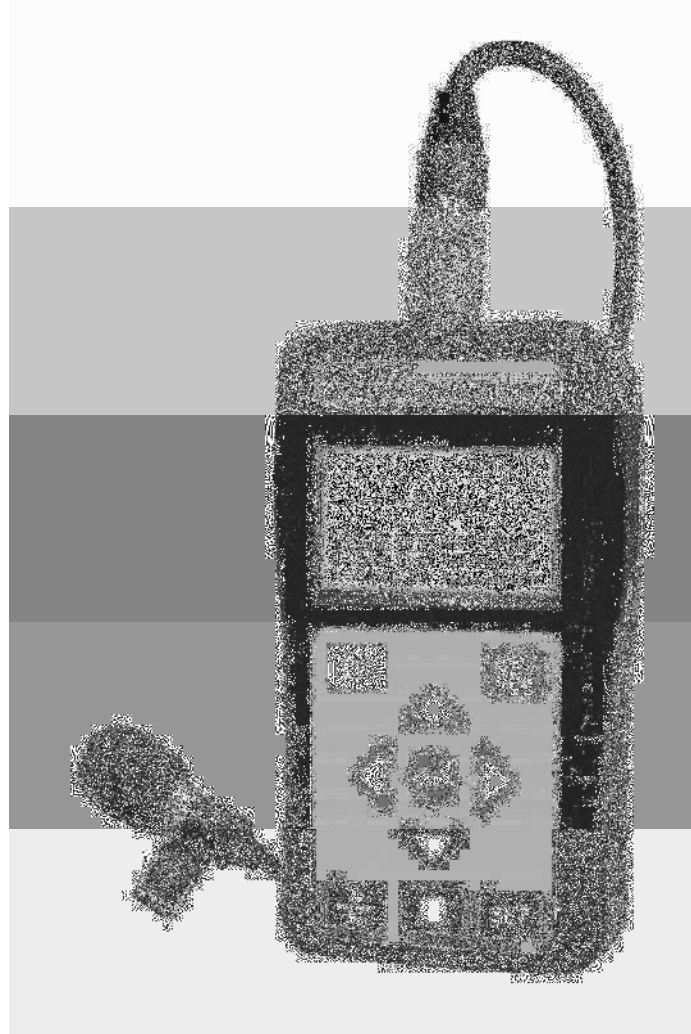

HB2ST1300001

Contents:

1.	SAFETY PRECAUTIONS	3
1.1.	Preliminary Description	3
1.2.	Note.....	3
2.	PREPARATION FOR USE	4
2.1.	Initial.....	4
2.2.	Supply Voltage	4
2.3.	Calibration	4
2.4.	Storage.....	4
3.	INSTRUMENT INSTRUCTIONS.....	5
3.1.	Instrument Description	5
3.1.1.	Controls Description	5
3.1.2.	Display Description.....	6
3.1.3.	ST-130S Microphone.....	7
3.2.	Noise Does Measurement Procedures	7
3.3.	Sound Level Measurement Procedures	8
3.4.	Auto Data Recode	9
3.5.	Single Data Recode	9
3.6.	Viewing Logged Reading	9
3.7.	Set Mode.....	10
3.7.1.	Test Mode Set.....	10
3.7.2.	Auto Power Off Set.....	10
3.7.3.	Sampling Time & Auto Recode Set.....	11
3.7.4.	Real Time Clock Set.....	11
3.7.5.	94dB Offset Adjust Set	11
3.7.6.	Noise Standard Set	12
3.7.7.	SLM Function Set.....	12
4.	SOFTWARE.....	13
4.1.	System Requirements.....	13
4.2.	Software Description	13
4.3.	Tools Description.....	14
4.4.	Open File.....	14
4.4.1.	Zoom Function.....	14
4.4.2.	Deag function	14
4.5.	Option.....	15
4.5.1.	PC Setting.....	15
4.5.2.	Meter Setting	15
4.6.	Print Noise Dose Report.....	16
4.7.	Sound level chart & Noise dose chart (LN %).....	16
4.8.	Enable PC data logger	17
4.9.	Download Recod data.....	17
4.10.	Erase Recod data.....	17
5.	EXPLANATION.....	18
5.1.	1. Measurement Parameters:.....	18
5.2.	A, C, Z Weighting Instruction:.....	19
5.2.1.	Input interface.....	19
6.	MAINTENANCE	20
6.1.	General Information.....	20
6.2.	Battery Replacement.....	20
6.3.	Cleaning	20
6.4.	End of Life	20
7.	TECHNICAL SPECIFICATIONS.....	21
7.1.	Feature	21
7.2.	Environment.....	22
7.2.1.	Environmental Conditions.....	22
7.2.2.	EMC.....	23

7.3. Accessories 23
 7.3.1. Standard Accessories..... 23
8. SERVICE 24
 8.1. Warranty Conditions..... 24
 8.2. Service 24

1. SAFETY PRECAUTIONS

When taking measurements:

- Avoid doing measurements in humid or wet places - make sure that humidity is within the limits indicated in section “environmental conditions”.
- Avoid doing measurements in presence of explosive gas, combustible gas, steam or excessive dust.

The following symbols are used:



Caution: refer to the user’s manual. An incorrect use may damage the tester or its components



The instrument conforms to the CE standard

1.1. Preliminary Description

The ST-130/ST-130s is designed to test noise exposure in accordance with OSHA,MSHA,DOS,ACGIH, and ISO standards.

Fast and easy on-site surveys help determine noise reduction requirements.

The meter can also be used in SLM(sound level meter)mode.

The SLM mode has a datalogging feature that can recode up to 1000K readings which can be download to PC for analysis.

The built-in USB interface to connect PC.

Applications: Evaluation of environmental noise, Measurements of noise at workplaces, Assessment of product noise.

1.2. Note



CAUTION

Does not observe the warning and/or operation instruction, it’s possible to damage the instrument either its components or the operator

- Do not operate the instrument at temperature and humidity environment beyond to reference conditions of chapter 7.2.1.
- Keep the microphone dry and avoid severe vibration.
- Wind blowing across the microphone would bring additional extraneous noise. Once using the instrument in the presence of wind, it must mount the windscreen to prevent the undesirable signals.

2. PREPARATION FOR USE

2.1. Initial

The instrument has been checked mechanically and electrically prior to shipment. Take care to ensure the instrument reaches you undamaged.

However, it is wise to carry out a rapid check in order to detect any possible damage that may cause during transport. If its damage, claims to the dealer immediately.

Check the packaging content according to packing list reported in 7.3.1 chapter .In case of discrepancies, contact the dealer immediately.

In the event of re-shipment of the instrument please follow the instructions reported in chapter.

2.2. Supply Voltage

The instrument is powered by batteries.

When battery voltage is low than low battery voltage, turn on low battery symbol.



CAUTION

If you don't use the instrument for a long period, please take the batteries out to prevent eventual acid leakage from damaging the instrument

2.3. Calibration

The instrument complies with the technical specifications contained in this manual and such compliance is guaranteed for 1 year. The instrument is maybe need recalibration after one year.

2.4. Storage

After a period of storage in extreme environmental conditions exceeding the limits mentioned in paragraph 7.2.1 let the instrument return to normal measuring conditions before using it.

3. INSTRUMENT INSTRUCTIONS


3.1. Instrument Description

3.1.1. Controls Description

The diagram illustrates the Soundtek Noise Dose Meter ST-130 from three perspectives: front view, back view, and a detailed view of the USB interface. The front view shows the microphone assembly at the top, an LCD display, and a control panel with various buttons. The back view shows the belt clip and battery cover. The USB interface view shows a rectangular port.

1.	Microphone
2.	Microphone Cable
3.	Microphone Connector(Male)
4.	Microphone Connector(Female)
5.	LCD Display
6.	Record data / Reading Record data button
7.	Power ON/OFF Button
8.	UP Button
9.	Right Button
10.	Enter Button
11.	Down Button
12.	Left Button
13.	SET Button
14.	Stop Button
15.	Start /Pause Button
16.	Belt clip
17.	Battery Cover
18.	USB Interface

3.1.2. Display Description

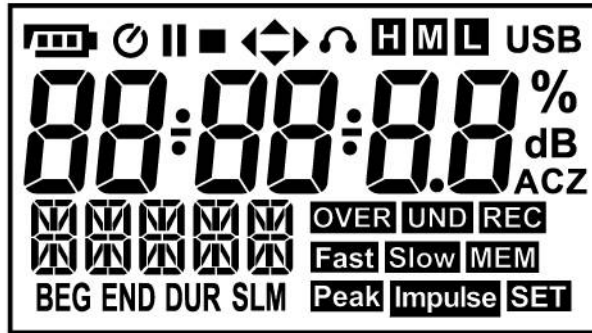


	Low Battery		Auto Power Off Enable
	Pause		115dB indicator(SPL)
	Stop	Peak	140 dB indicator(Peak)
	Start	USB	USB Interface
H	SPL Hi dB Range (140~70)		dB Display
M	SPL Mid dB Range (110~50)		Testing mode
L	SPL Lo dB Range (90~30)		Sound Level Meter mode
%	Noise Dose %	dB	Sound Noise dB
A	A Weighting	Fast	Fast Weighting
C	C Weighting	Slow	Slow Weighting
Z	Z Weighting		Impulse Weighting
	dB test data > Hi level	UND	dB test data < Lo level
REC	Solid:Auto Recode standby ;Flashing Recodeing	BEG	Start test time
MEM	Visit recode data	END	Stop test time
SET	SET mode turn on	DUR	Test duration





3.1.3. ST-130S Microphone


- Diameter : 1/2 inch
- Polarization voltage : 0V
- Dynamic range : 25dBA ~140dB
- Sensitivity : $-32\pm 3\text{dB}$ (250Hz 0dB=1V/Pa)
- Free field frequency response : $\pm 2\text{dB}$ (25Hz~12.5kHz)

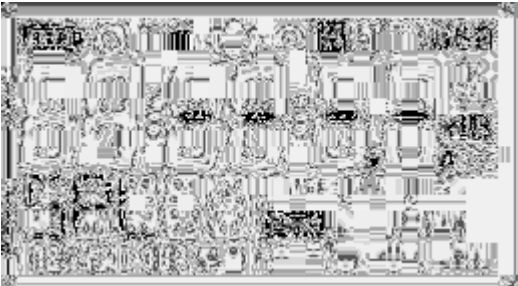Frequency (KHz)	Deviation of pressure
0.25	0.0
1	-0.1
2	-0.5
3	-0.6
4	-0.9
5	-1.2
6	-1.7
7	-2.2
8	-2.8
9	-3.3
10	-4.1
12.5	-6.0



3.2. Noise Does Measurement Procedures




- Press  turn on meter
- LCD do not display  symbol.
- Press  turn on noise dose testing. , press  again pause testing.

- Press  select testing information


◎ SPL→Dose%→LPMAX→LPMIN→PKMAX→LEQ→SEL→LEP8→TWA8→
LVAG→LN%

- Press  to observe testing date information. Press  change date display information.

◎ Time(hh:mm:ss)→date(YY-DD-MM)


- Press  stop testing

3.3. Sound Level Measurement Procedures

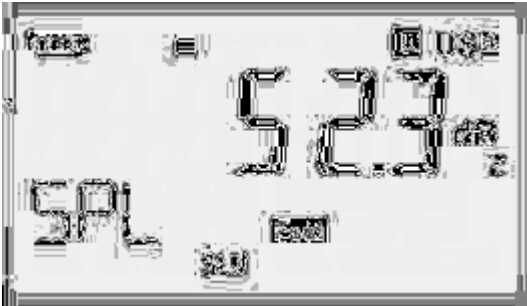


- Press  turn on meter

- LCD show  symbol

- Press  button to select test function.

◎ SPL→Leq→SEL→PeakMAX

- Press  testing , Press  again pause testing

- If test data big than HI test range at the same time LCD showing 

- If test data small than Low test range at the same time LCD showing **UND**

- Leq integral time setting and the same sampling time

- When the sampling time is set to zero, the integration time until the user exits

- Press  stop testing


CAUTION



Wind blowing across the microphone would bring additional extraneous noise. Once using the instrument in the presence of wind with speed higher than 10m/s, it must mount the windscreen to prevent the undesirable signals. Keep the microphone dry and avoid severe vibration.

3.4. Auto Data Recode



- Press  enabled Auto Recode function.
- LCD **REC** symbol will be flash.
- The bottom left of LCD display "Write", this mean the data will be writing to memory.
- The bottom left of LCD display "FULL", this mean the data will be full.
- Auto Recode function can not use menu recode.







3.5. Single Data Recode




- Press  each time to store the display reading and **REC** symbol flash.




3.6. Viewing Logged Reading




- Press  button more than 1 sec into the viewing logged reading mode.
- Press  or  to scroll through the readings.
- Press  select dose recode information. (Noise Dose Meter mode)
- Press  to change data or date, Press  change Time. (hh:mm:ss→YY-MM-DD)



- Press  more than 1 sec again to exit viewing logged reading mode.

3.7. Set Mode


- Press  into set mode , can set 7 functions in set mode
- Press  exit set mode
 - ⊙ Test Mode→Auto Power Off→Sampling Time & Auto Recode→Real Time Clock→94dB Offset Adjust→Noise standard→SLM Function
- Press  again,save set and into next set mode

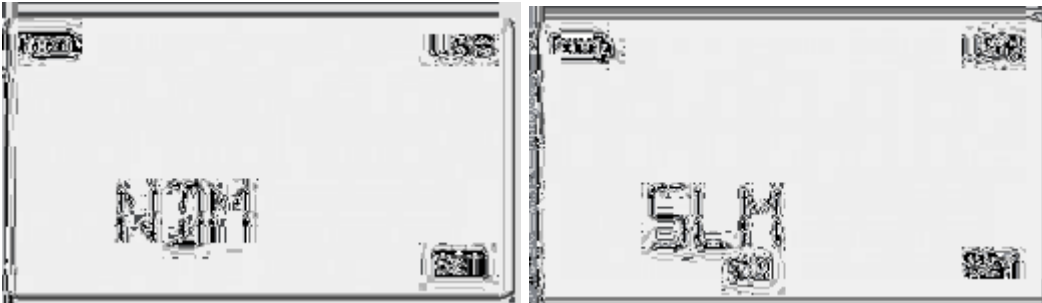3.7.1. Test Mode Set



- Press  or  , change test mode. (NDM →SLM)
- ⊙ NDM: Noise Dose Meter
- ⊙ SLM:Sound Level Meter



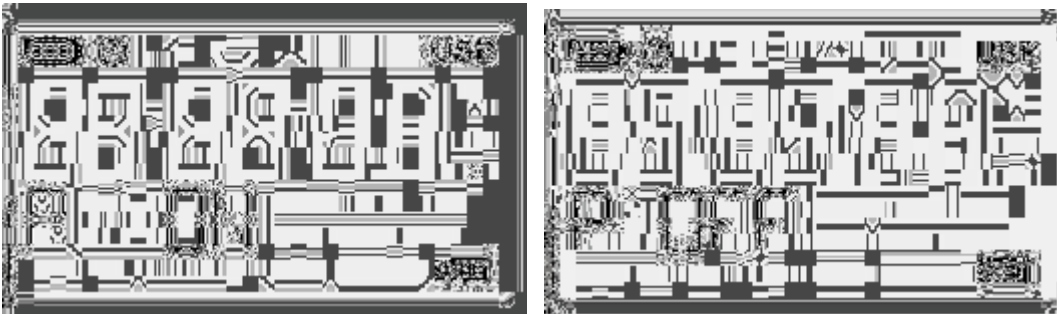

3.7.2. Auto Power Off Set




- Press  or  , enable or disable Auto Power Off function





3.7.3. Sampling Time & Auto Recode Set

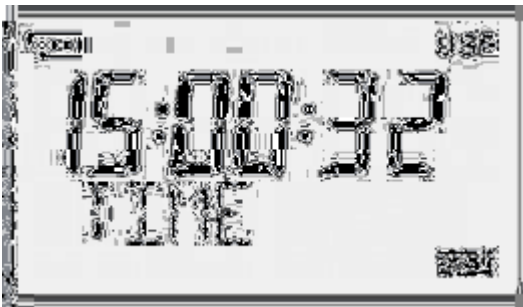

- Press  or , select auto recodes set or sampling time.
- Press  or  enable or disable Auto Recode, adjust sampling time.
- Minimum sampling time: 1 second; Maximum sampling time: 23 hours 59 minutes 59 seconds




3.7.4. Real Time Clock Set





- Press  or , select option to adjust.
- Press  or , adjust time digit.
-


3.7.5. 94dB Offset Adjust Set



- Press , auto run 94dB offset adjust.
- Press  or , change frequency weighted

- Press  or , adjust offset


3.7.6. Noise Standard Set

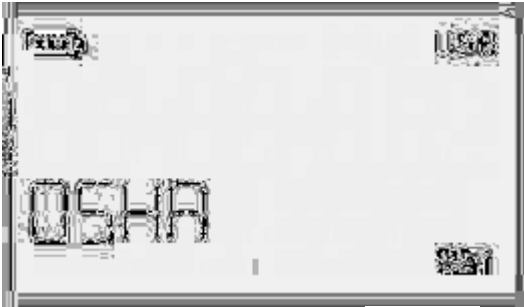

- Press  or , select NDM testing law

⊙ OSHA → MSHS → DOD → ACGIH → ISO85 → ISO90 → USER

3.7.7. SLM Function Set

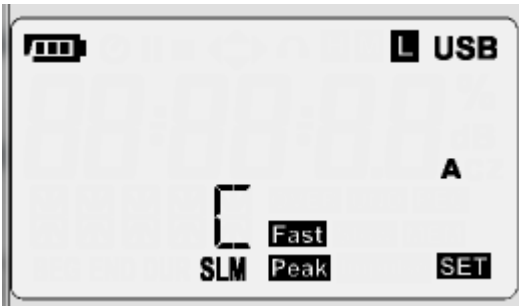

- Press  or , change test function

⊙ **H** → **M** → **L**

⊙ **Fast** → **Slow** → 

⊙ **A** → **C** → **Z**

⊙ Peak C → Peak Z

- Press  or , select test function


⊙ Sound level range → Time weighted → Frequency weighted → Peak frequency

4. SOFTWARE







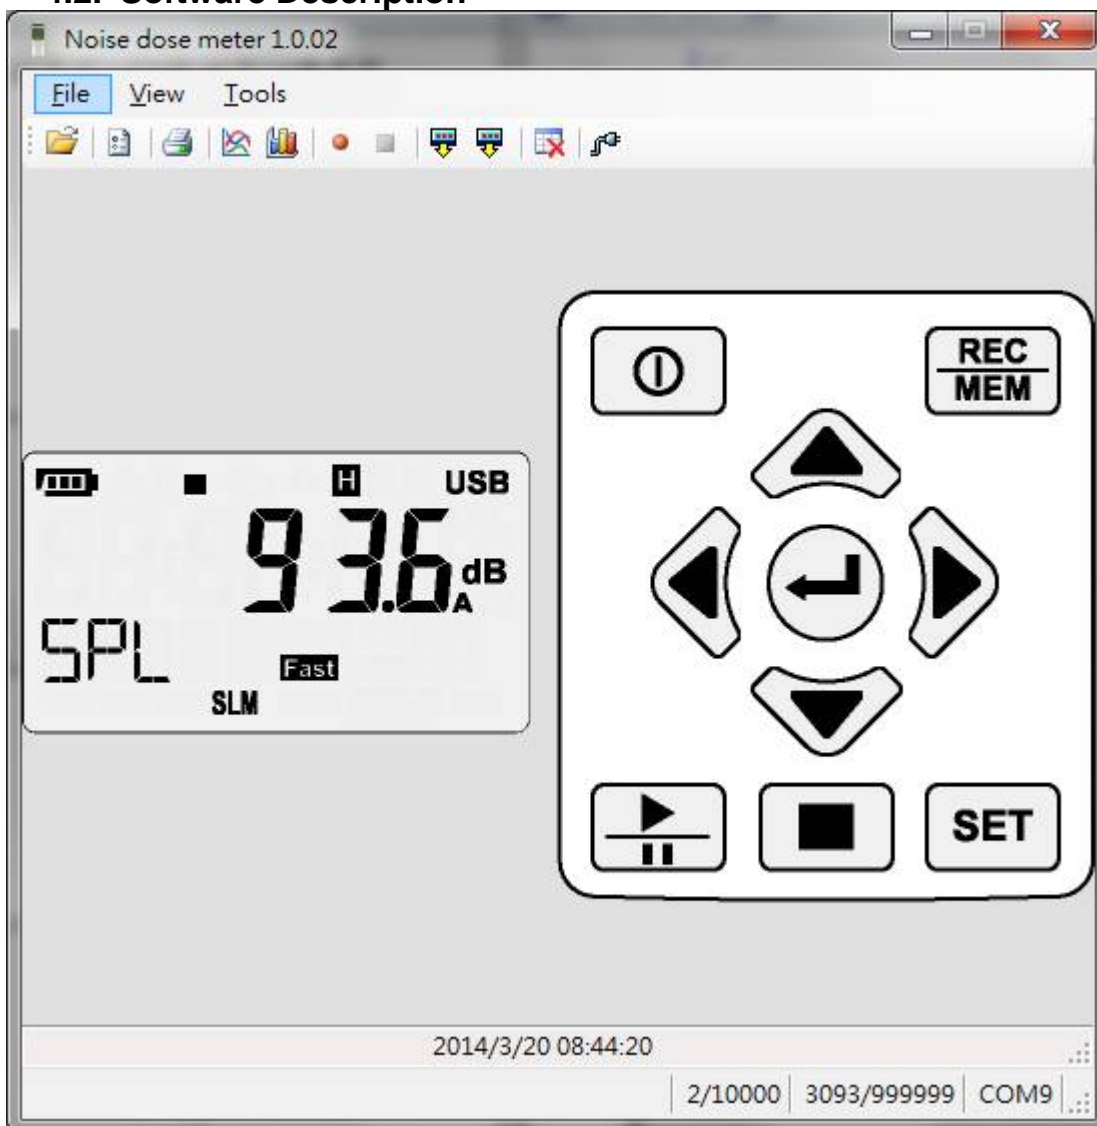



4.1. System Requirements

- Operating: Windows® XP/Windows Vista/Windows 7/Windows 8
- Storage:200 MB of available hard disk space.
- Processor: Intel Pentium® 4
- Memory:1 GB RAM (XP), 1.5 GB (Windows Vista/Windows 7/Windows 8)
- Other: [PL2303 Windows Drive](#) ;[Microsoft .NET Framework 3.5 Service Pack 1](#)

4.2. Software Description





4.3. Tools Description






	Open file		Options
	Print noise dose report (*.ndr)		Sound level chart
	Noise dose chart (LN%)		Start to log sound level (*.csv)
	Stop to log sound level		Download sound level logs; Download noise dose report
	Erase measured data that stored in meter		Automatic detect port which connect with meter

4.4. Open File

- Sound Level Log List Tool

Mode : <input type="text" value="SPL"/>	SPL→LEQ→SEL→PeakMax
Time Weight : <input type="text" value="Slow"/>	Fast→Slow→Impluse
Frequency Weight : <input type="text" value="A"/>	A→C→Z
<input type="button" value="LEQ & SEL"/>	Calculate LEQ & SEL
	Save file as....
	Graph

- Sound Level Logs Graph

	Zoom
	Deag
	Print
	Print Preview
	Print Setup



4.4.1. Zoom Function

- Click the left mouse button to zoom in
- Click the left mouse button to original size
- Hold the left mouse button to moving selection range
- keyboard '+', '-' can zoom in or zoom out



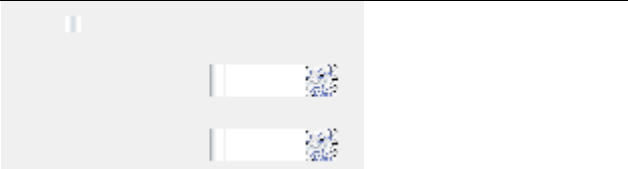
4.4.2. Deag function

- Hold the left mouse button can moving view range
- Hold CTRL+ left mouse button can be change view range and zoom



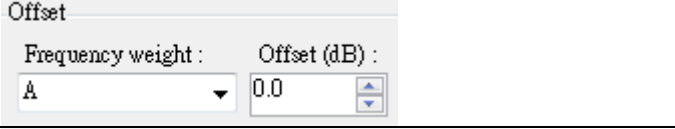
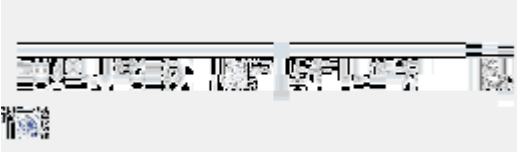

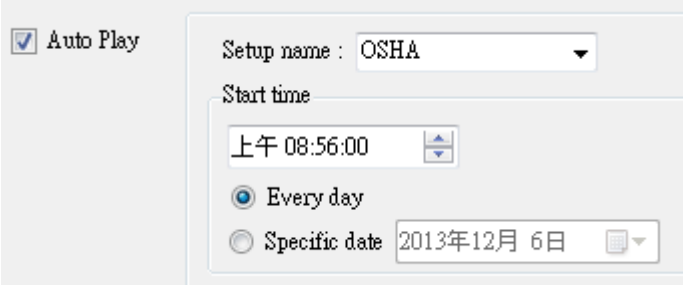
4.5. Option

	PC Setting
	Meter Setting




4.5.1. PC Setting

	PC data logger sample time.
	Click the left mouse button to change the color box
	Graph (Y-axis) sound level range

4.5.2. Meter Setting


	Serial number(0~9;A~Z)16 word
	Alarm setting
	Offset setting MAX:+1.5dB MIN:-1.5dB
	Setting meter real time clock
	Enable/disable auto recode. Setting sampl time
	Enable/disable auto play noise dose function. Meter must be turn on and setting in NDM(noise does meter) mode

4.5.3. Dose Setting

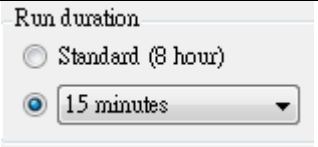	Select noise dose standard
	Select noise dose play time. Default standard(8hour), Other 5 ; 10 ; 15 ; 30min 1 ; 2 ; 4 ; 8 ; 10 ; 12 ; 24 hour
	Setting information import or export ,file format(*.ncg)


4.6. Print Noise Dose Report

- Select noise dose logger report (*.ndr)

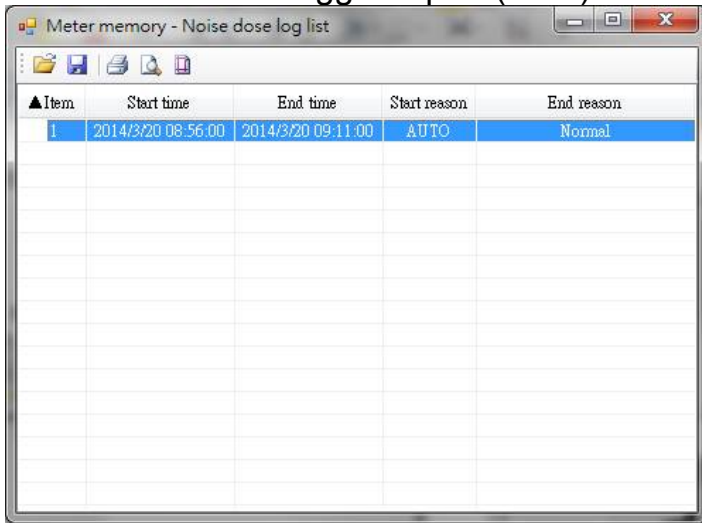

▲Item	Start time	End time	Start reason	End reason
1	2014/3/20 08:56:00	2014/3/20 09:11:00	AUTO	Normal

- Click  or  and key in user information , click ok ,the output report

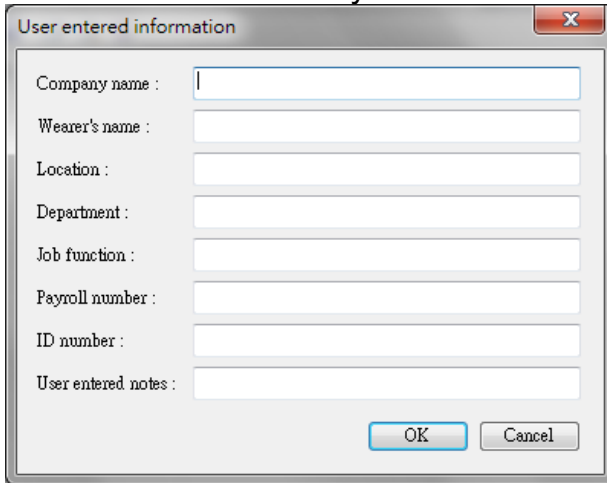

User entered information

Company name :

Wearer's name :

Location :

Department :

Job function :

Payroll number :



ID number :

User entered notes :


OK Cancel



4.7. Sound level chart & Noise dose chart (LN %)

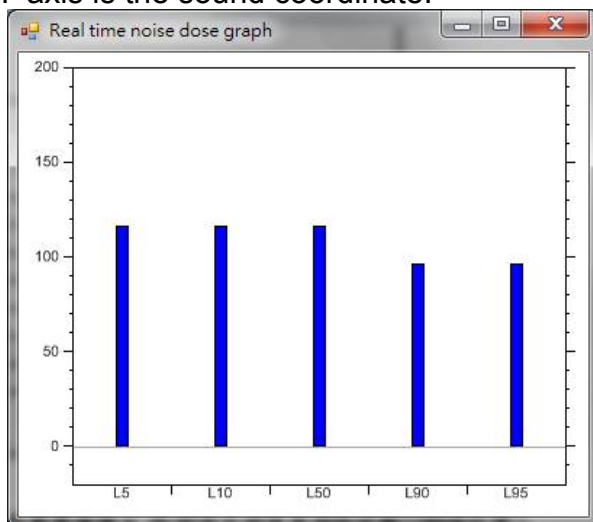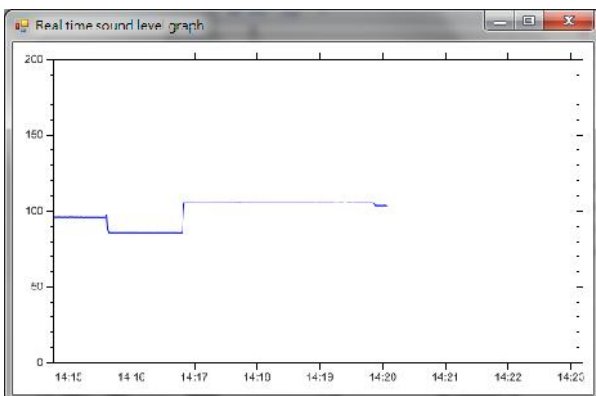- Sound level char. X-axis is the time coordinate.Y-axis is the sound coordinate.
- Noise does chart. X-axis is the LN%. Y-axis is the sound coordinate.

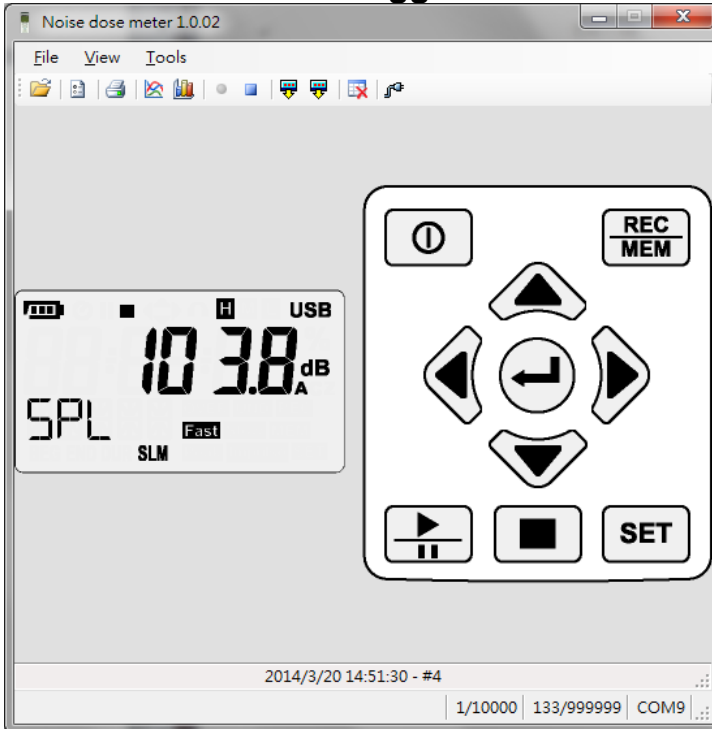


4.8. Enable PC data logger



- Click  enable data logger.
- Create a new log file (*. csv) in the hard disk.
- Click  stop data logger.

4.9. Download Recod data

- Click  download sound level logs or noise dose report on the meter mrmory
- Download 100K recode data. it takes about 15 minutes time-consuming, please be patiently

4.10. Erase Recod data

- Click  delete all recodes of the meter

5. EXPLANATION

5.1. 1. MEASUREMENT PARAMETERS:

Test Function	Screen parameter	Explanation
SPL	LAFp	Sound pressure level (SPL)
SPL	LASp	Sound pressure level (SPL)
SPL	LCFp	Sound pressure level (SPL)
SPL	LCSp	Sound pressure level (SPL)
SPL	LZFp	Sound pressure level (SPL)
SPL	LZSp	Sound pressure level (SPL)
Leq	LAFq	Equivalent continuous level for the duration of the measurement for A weighting
Leq	LCFq	Equivalent continuous level for the duration of the measurement for C weighting
Leq	LZFq	Equivalent continuous level for the duration of the measurement for Z weighting
SEL	LAE	Frequency weighted sound exposure level for the duration of the measurement for A weighting
SEL	LCE	Frequency weighted sound exposure level for the duration of the measurement for C weighting
SEL	LZE	Frequency weighted sound exposure level for the duration of the measurement for A weighting
Peak	Lcpeak	Instantaneous C peak level

5.2. A, C, Z WEIGHTING INSTRUCTION:

A: The A weighting curve is based on 40 Phon Fletcher-Munson Equal Loudness Contour, Noise assessment in human, suggest to use the A weighting.

C: The C weighting in essentially is approximate smooth. With labor safety concern, suggest using the C weighting.

Z: The Z weighting for the electric instrument interior not the linear signal which processes after the filter, suits in wants to output AC or the DC signal does other research to use.

The Z weighting is a linear signal which is not processed through the filter.

It's suitable to output AC or DC signal for research.

Sound Level Meter Class Description:

- Class 0: use in the laboratory reference standard.
- Class 1: laboratory or field use.
- Class 2: laboratory or field use.
- Class 3: general field use.

5.2.1. Input interface


The front is PLT 4, the signal input receptacle.

ST-130

Pin 1 Power
Pin 2 GND
Pin 3 NC
Pin 4 NC

ST-130S

Pin 1 Power(+)
Pin 2 GND
Pin 3 Power(-)
Pin 4 GND

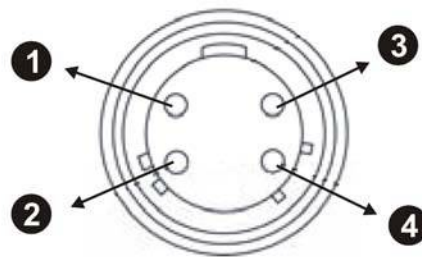

6. MAINTENANCE

6.1. GENERAL INFORMATION

This is a precision instrument. To guarantee its performances be sure to use it or keep it stored on suitable environmental conditions. Do not expose it to high temperatures or humidity or direct sunlight. Be sure to turn it off after use. If you expect not to use the instrument for a long period remove batteries to avoid leakages of battery liquid which could damage the its inner components.

6.2. BATTERY REPLACEMENT

The low battery “” indication is displayed; the batteries are to be replaced.

- Turn off the instrument.
- Remove the battery cover.
- Remove all the batteries from the battery holder.
- Insert four new batteries of the same type respecting the polarity signs.
- Install the battery cover.
- Please depend on the local laws and regulations to process the waste battery.

6.3. CLEANING

To clean the instruments use a soft dry cloth. Never use a wet cloth, solvents or wate.

6.4. END OF LIFE



Caution: this symbol indicates that equipment and its accessories shall be subject to a separate collection and correct disposal.



7. TECHNICAL SPECIFICATIONS

7.1. FEATURE

Environmental conditions: temperature $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$, relative humidity < 80%.

Display	Single LCD MAX reading 999999
Display Refresh Rate	1 Time/sec
Standards	IEC 61252-1993 IEC 61672-1-2003 ANSI S1,25-1992 ANSI S1,4-1983 ANSI S1,43-1997
Microphone(ST-130S)	1/2" pre-polarized condenser microphone build in preamplifier: 1V/Pa@250HZ, frequency range: 20 Hz~12.5 kHz, Thermal noise: <25 dB(A)
Microphone(ST-130)	1/2 inch Electret condenser microphone
Measurement Items(NDM)	Does%,Lxyp,Lxmax,Lxmin,Lxeq,SEL(LAE),Peak,LAVG ,TWA,LEP,LN%
Measurement Items(SLM)	Lxyp,Lxmax,Lxmin,Lxeq,SEL(LAE),Peak
Measurement Range	30dB to 130dB (A) 35dB to 130dB (C) 40dB to 130dB (Z)
Dynamic Range	60 dB
Accuracy	$\pm 1.5\text{dB}@94\text{dB } 1\text{KHZ}$
Internal memory	MAX Datalogger data : 10000(NDM);1000000(SLM)
Maximum Peak C Weighting Sound Level Measurement	90~143 dB
Time Weighting	Fast, Slow, Impulse, Peak
Frequency Weighting	A/C/Z
Frequency Range	20Hz~8KHz
Starting Time	< 10 Second
Battery Life(ST-130)	24 hours (9V×1 battery Alkaline)
Battery Life(ST-130S)	20 hours (9V×1 battery Alkaline)
Dimensions	113(L) x 65(W) x 34(H) mm

7.2. ENVIRONMENT

7.2.1. Environmental Conditions

- For inside use, max height: 2000m
- Reference temperature: $23^{\circ} \pm 5^{\circ}\text{C}$
- Operation temperature: $5 \sim 40^{\circ}\text{C}$
- Operation humidity: <80% RH
- Storage temperature: $-10 \sim 60^{\circ}\text{C}$
- Storage humidity: <70%

7.2.2. EMC

This instrument was designed in accordance with EMC Standards in force and its compatibility has been tested in accordance with EN61326-2 (2006).

7.3. ACCESSORIES

7.3.1. Standard Accessories

- Meter: Noise Dose body x 1 .
- User's manual.
- Carrying case.
- 1 batteries 9 V 、 NEDA 1604 、 IEC 6F22 or JIS 006P
- ??mm diameter windscreen.
- Setup CD-Disk.
- MINI USB Cable (Mini B type).

8. SERVICE

8.1. WARRANTY CONDITIONS

This instrument is guaranteed for one year against material or production defects, in accordance with our general sales conditions. During the warranty period the manufacturer reserves the right to decide either to repair or replace the product. Should you need for any reason to return back the instrument for repair or replacement take prior agreements with the local distributor from whom you bought it. Do not forget to enclose a report describing the reasons for returning (detected fault). Use only original packaging. Any damage occurred in transit due to non-original packaging will be charged anyhow to the customer.

The warranty doesn't apply to:

Accessories and batteries (not covered by warranty)

Repairs made necessary by improper use (including adaptation to particular applications not foreseen in the instructions manual) or improper combination with incompatible accessories or equipment.

Repairs made necessary by improper shipping material causing damages in transit.

Repairs made necessary by previous attempts for repair carried out by non-skilled or unauthorized personnel.

Instruments for whatever reason modified by the customer himself without explicit authorization of our Technical Dept.

The contents of this manual may not be reproduced in any form whatsoever without the manufacturer's authorization.

Our products are patented. The logotypes are registered. We reserve the right to modify characteristics and prices as part of technological developments which might require them.

8.2. SERVICE

Shouldn't the instrument work properly, before contacting your distributor make sure that batteries are correctly installed and working, check the test leads and replace them if necessary.

TENMARS ELECTRONICS CO., LTD

6F, 586, RUI GUANG ROAD, NEIHU,
TAIPEI 114, TAIWAN.

E-mail: service@tenmars.com

<http://www.tenmars.com>